




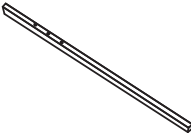





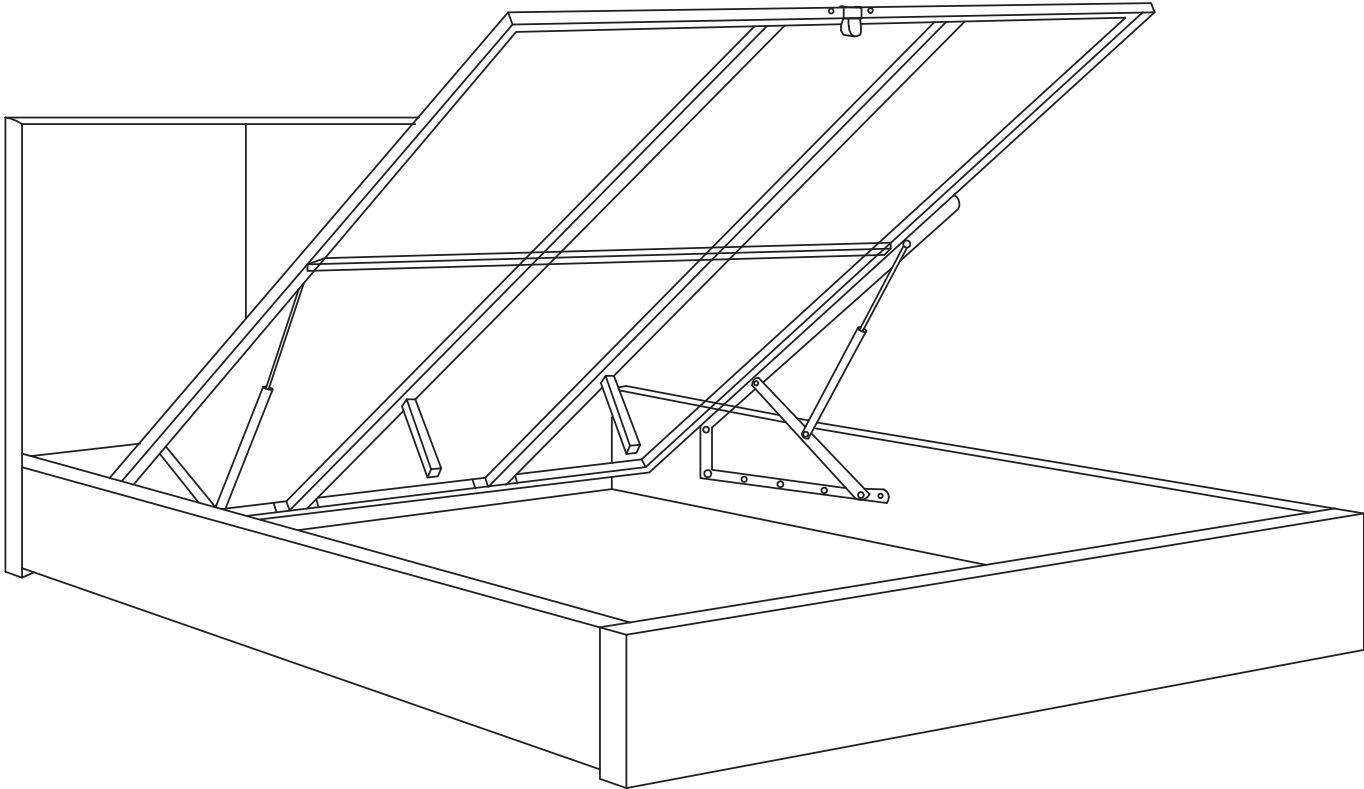






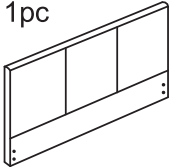








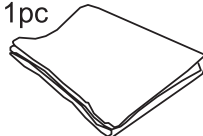

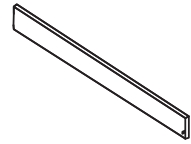




# ASSEMBLY INSTRUCTIONS

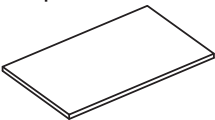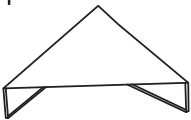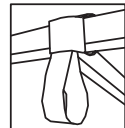


### Parts List

|  |   |  |
|--|---|--|
| ① x 1pc<br>   | ② non-woven fabric x 1pc<br> | ③ x 2pcs<br>       |
| ④ x 1pc<br>   | ⑤ x 2pcs/184cm<br>           | ⑥ x 1pc/135cm<br>   |
| ⑦ x 2pcs<br>  | ⑧ x 2pcs<br>                 | ⑨ x 2pcs/184cm<br> |
| ⑩ x 4pcs<br>  | ⑪ x 4pcs<br>                 | ⑫ x 1pc<br>        |
| ⑬ x 1pcs<br> | ⑭ x 1pc<br>                 | ⑮ x 2pcs<br>      |
| ⑯ x 1pc<br> | ⑰ x 1pc/135cm<br>          | ⑱ x 1pcs<br>     |
|  |   |  |


### Hardware List

| REF |   | HARDWARE NAME | QTY   |
|-----|---|---------------|-------|
| A   |    | M8 x 20 BOLT  | 8pcs  |
| B   |    | M8 x 30 BOLT  | 28pcs |
| C   |    | M8 x 45 BOLT  | 13pcs |
| D   |    | M8 x 70 BOLT  | 2pcs  |
| E   |    | BOLT          | 4pcs  |
| F   |    | M6 x 20 BOLT  | 8pcs  |
| G   |    | FLAT WASHER   | 8pcs  |
| H   |    | SPRING WASHER | 8pcs  |
| I   |    | NUT           | 12pcs |
| J   |   | ALLEN KEY     | 1pc   |
| K   |  | OPEN SPANNER  | 1pc   |
| L   |  | ALLEN KEY     | 1pc   |
| M   |  | M4 x 40 BOLT  | 4pcs  |
|     |   |               |       |
|     |   |               | 2     |


Step 1

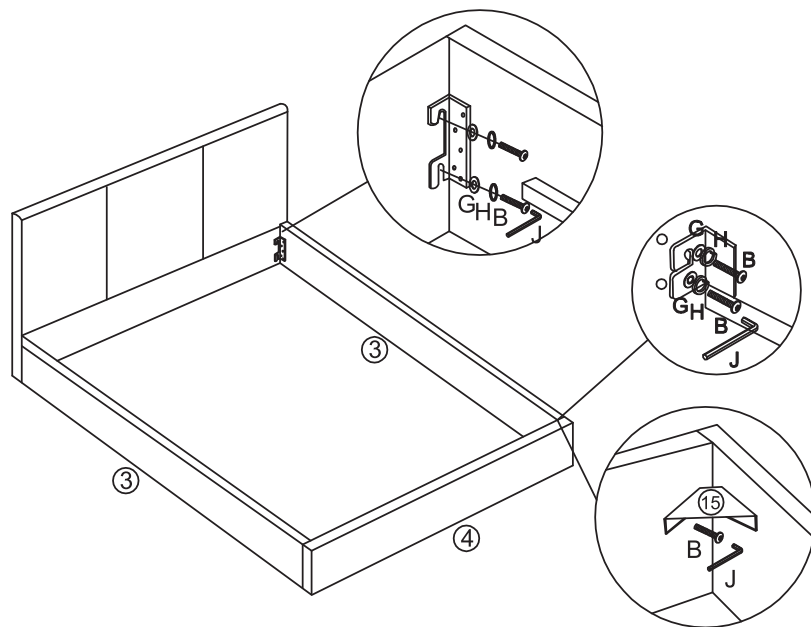


Step 2

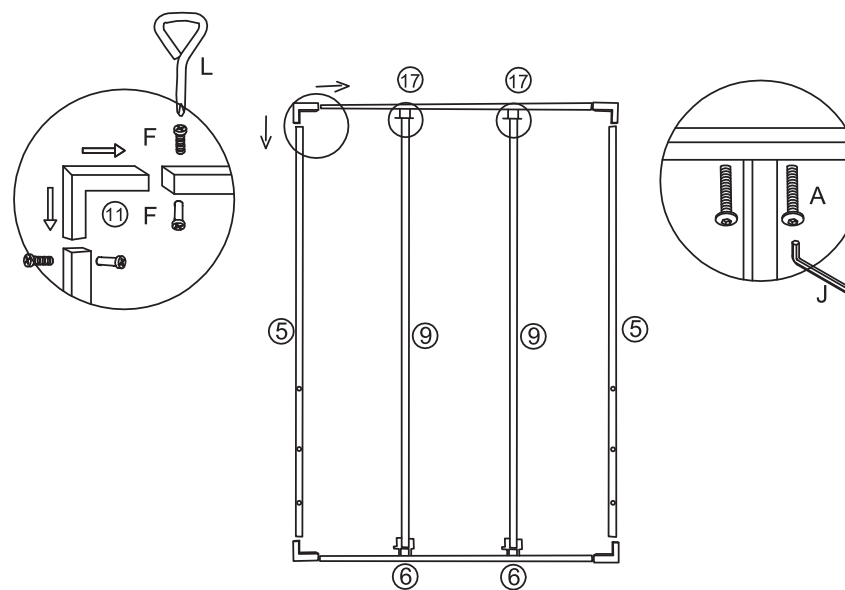


Step 3

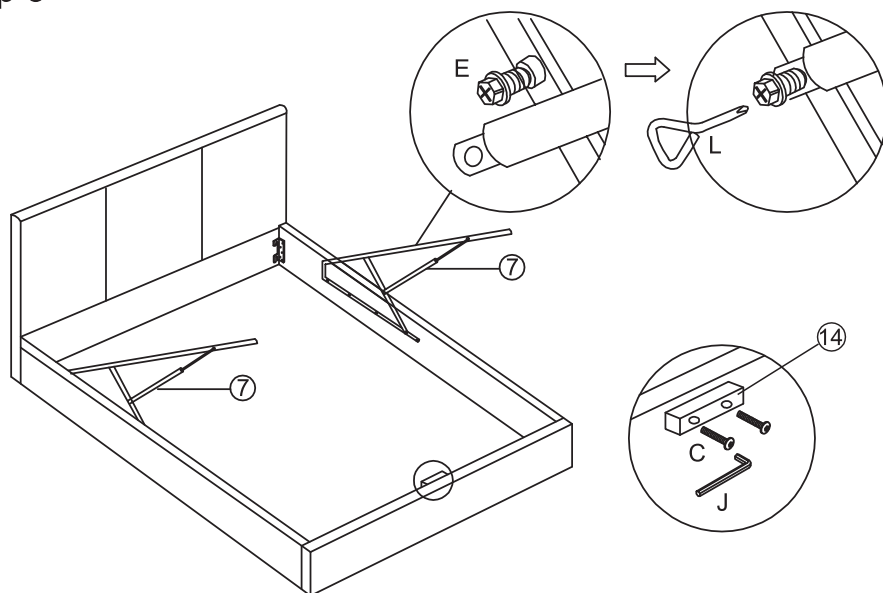


Step 4

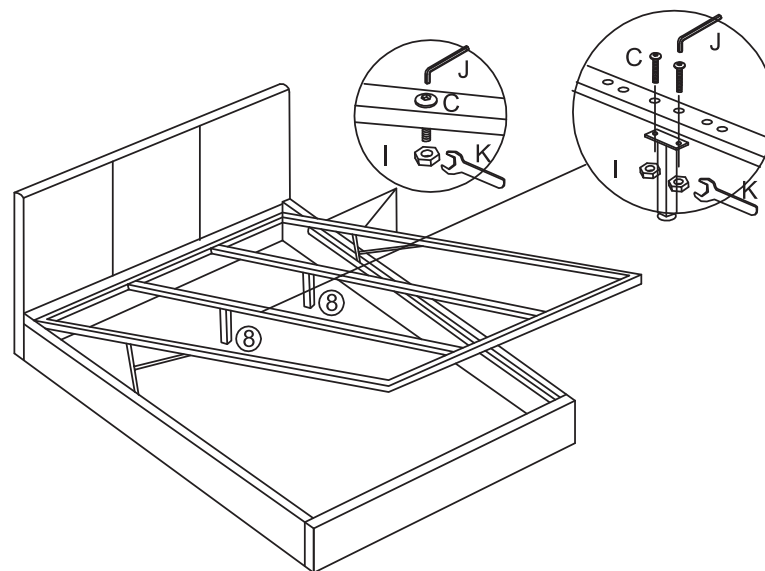

### Step 5

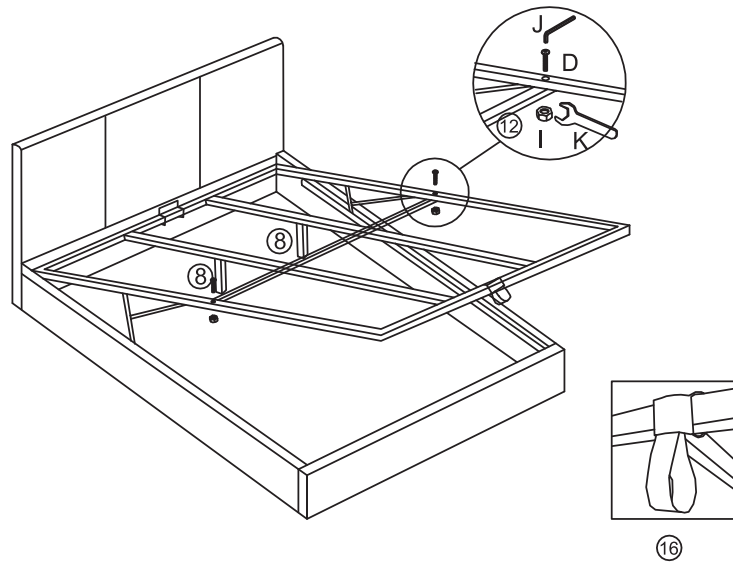


### Step 6

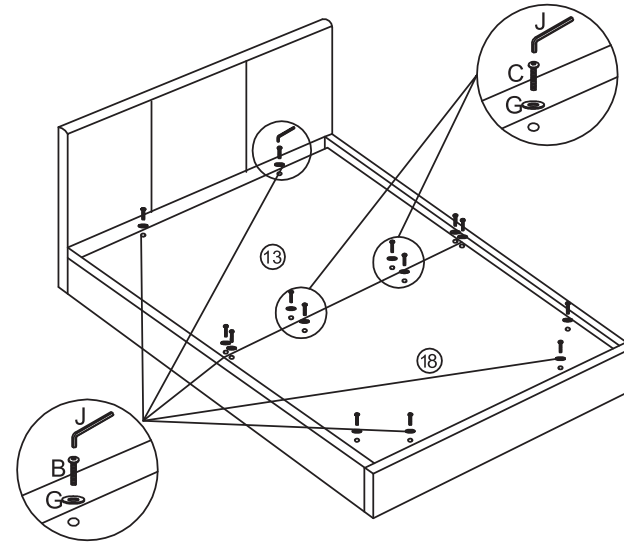


4

### Step 7

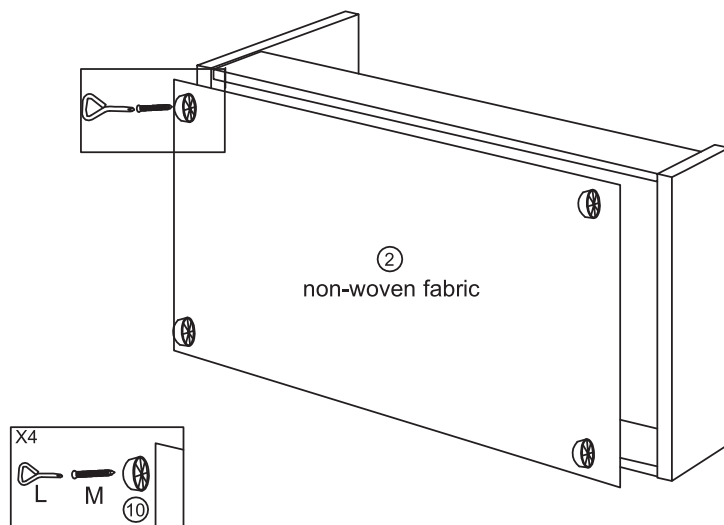

### Step 8

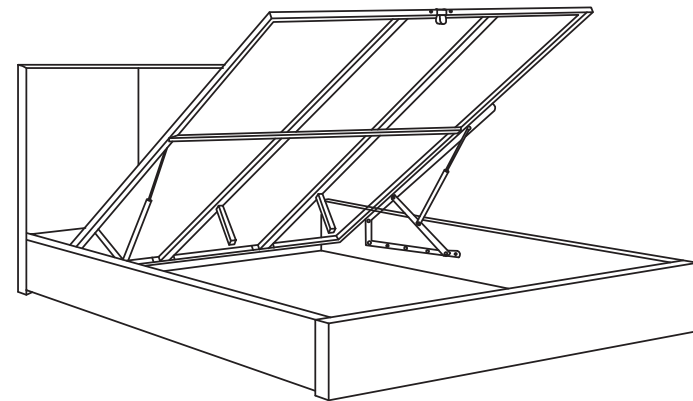

4